

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER—To reduce the risk of electrocution:

1. Do not place or store the pLink® charger or plug where it can fall or be pulled into a tub or sink.
2. Do not place the Clarisonic charger in or drop the charger or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
3. Do not reach for a pLink charger or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic Mia brush handle if it is damaged. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

SAVE THESE INSTRUCTIONS

The handle and the charger have no serviceable parts.

The supply cord cannot be replaced. If the cord is damaged, the charger must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with Part 18 of the FCC Rules. Refer to clarisonic.com for further information.

IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic Mia. Refer to our website for more information.

We recommend that you **do not** share brush heads if you and/or any other Clarisonic user suffer from any skin conditions.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with Clarisonic Skin Cleansing Systems. **Do not** use Mia with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using Mia to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

This product uses magnets.

WARRANTY

We are happy to offer a 30 day money back guarantee. If you are for any reason dissatisfied with the purchase of your Mia from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

In addition, every Clarisonic Mia comes with a one-year warranty covering any problems resulting from everyday use of the product. Call Customer Service at 888-525-2747 if you feel your Mia is not operating properly.

ALSO AVAILABLE FROM CLARISONIC

Your Clarisonic Mia Skin Cleansing System includes a cleanser optimized for use with your Mia and a Sensitive brush head. We also offer Normal and Delicate brush heads and cleansers for different skin types. Purchase Clarisonic products from your skin care professional, spa, Clarisonic retailer, or from clarisonic.com.

RENEWAL SERUM (for all skin types)

Apply this translucent soothing serum after using Mia for healthy, radiant skin.

CLEANSERS

Gentle Hydro Cleanser (for normal to sensitive skin)

Nourishing Care Cleanser (for dry and mature skin)

Refreshing Gel Cleanser (for oily skin)

Refining Skin Polish (for all skin types)

BRUSH HEADS

Normal (gray)

Sensitive (white)

Delicate (blue)



888-525-2747 | clarisonic.com



CLARISONIC CLASSIC SKIN CLEANSING SYSTEM

Our classic model with 2 speeds and T-TIMER® setting.

CLARISONIC PLUS FOR FACE & BODY

Three speeds for the face plus a body mode to care for areas of the body needing extra attention.

OPAL™ SONIC INFUSION SYSTEM

Opal brings proven sonic technology to eye care, for anti-aging results better than manual serum application. In just one minute, Opal provides more than 7500 gentle micro-massages to instantly hydrate, smooth and brighten the eyes.

REGISTER TODAY

Register and become a Clarisonic Preferred Customer and receive a \$25 savings offer!*

To register your Clarisonic Mia go to www.clarisonic.com/registration. Sign up for Clarisonic Email and gain access to sneak previews of new product introductions and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy; we do not share your personal information with any third parties.

*See www.clarisonic.com/registration for \$25 Savings offer requirements.

Visit clarisonic.com for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

clarisonic

© Pacific Bioscience Laboratories, Inc. 2010. All rights reserved. Clarisonic, Mia, pLink, and T-Timer are registered trademarks and Opal is a trademark of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.
13222 SE 30th Street #A1
Bellevue WA 98005
Toll Free: 888-5-CLARISONIC or 888-525-2747
Assembled in USA

PBL04603C

Mia®

SONIC SKIN CLEANSING USER GUIDE

Become a Clarisonic Preferred Customer
Details on back

1
SPEED

clarisonic





YOUR CLARISONIC® Mia

The essential first step in your daily skin care ritual, Clarisonic Mia is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Mia gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Results include 6x more makeup removed than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.†

READ ALL INSTRUCTIONS BEFORE USE

TO USE

Prior to the first use, charge the Clarisonic Mia handle for 24 hours.

If you use makeup, remove eye makeup by hand.

Wet your skin and the brush head with warm water. Liberally apply cleanser to your skin or to the brush head. Push the on/off button to turn your Clarisonic on and gently move the brush using a small circular motion, beginning on the forehead, then moving to the nose/chin area and the cheeks.


Pressing too hard will impede the motion of the brush and reduce its effectiveness. The outer brushes are designed to contain any residual mist from the brush oscillation, so be sure to hold the brush head flush to your skin.

To pause the cleansing cycle for up to 30 seconds, simply press the on/off button.

Mia will automatically shut off after one minute.

The Mia handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

Gently move the brush using a small circular motion.

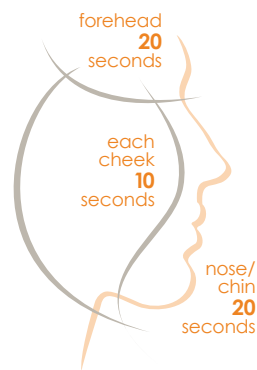

CHARGING

Your Clarisonic Mia is rechargeable with the included pLink™ charger, which magnetically attaches to the handle as shown. A fully charged Mia gives 20 minutes of use.

Charge Indicators

Action	Indicator
Attach pLink charger	Brush head pulses once
Charge the handle	LED flashes while charging LED glows solid when fully charged
Detach pLink charger	Brush head pulses once if partially charged Brush head pulses twice if fully charged
After 20 minutes of use, the handle needs to be charged	Brush head pulses and LED flashes Allow approximately 18 hours for a full charge

The pLink charger is compatible with 100-240 Volts AC; 50/60 Hz, allowing it to be used worldwide with the appropriate country adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

NOTE: The Mia handle is not compatible with the charging cradle for the full-size Clarisonic models.

NOTE: The LED is located on the back side of the handle. The LED is visible when:

- The handle is in pause mode
- The pLink charger is attached to the handle and it is plugged in



CARING FOR YOUR Mia

To keep your Mia in optimum condition, care for it as follows: Do not use abrasive cleaners or chemicals to clean any part of Mia. Do not put any part of the Mia in a dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

CHARGER

IMPORTANT: Unplug the charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

To remove the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

To attach the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

TIP: Use the brush head cap to easily remove and attach the brush head with a simple twist.



HEALTHY SKIN BEGINS WITH CLARISONIC

WHY SONIC?

While cleansing is the first step in any skin care ritual, it is often overlooked and undervalued. With typical manual cleansing, dirt and oil are not as effectively removed and may become trapped in your pores and fine lines. Clarisonic is sonic technology proven to gently yet effectively loosen dirt and oil to clear your pores.†

A BOOST FOR YOUR SKIN CARE PRODUCTS

Clarisonic cleanses your skin so effectively that it actually prepares the skin to better absorb skin care products, and it creates the perfect canvas for makeup. Finally, your serums and moisturizers have the chance to work the way they should.

SKIN CARE DOESN'T GET MUCH SIMPLER

Cleansing with Clarisonic is simple, fast and convenient. Cleanse for one minute, once or twice a day, with your favorite non-abrasive cleanser at the sink, in the shower, or in the tub.

† Data on file.